



MONTAGE

Assembling method:

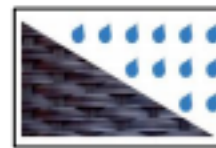

Cable ties: Fasten the screening every 10-15 cm - assembling mainly comes down to interlacing cable ties through polyrattan stripes and attaching them to the railing.

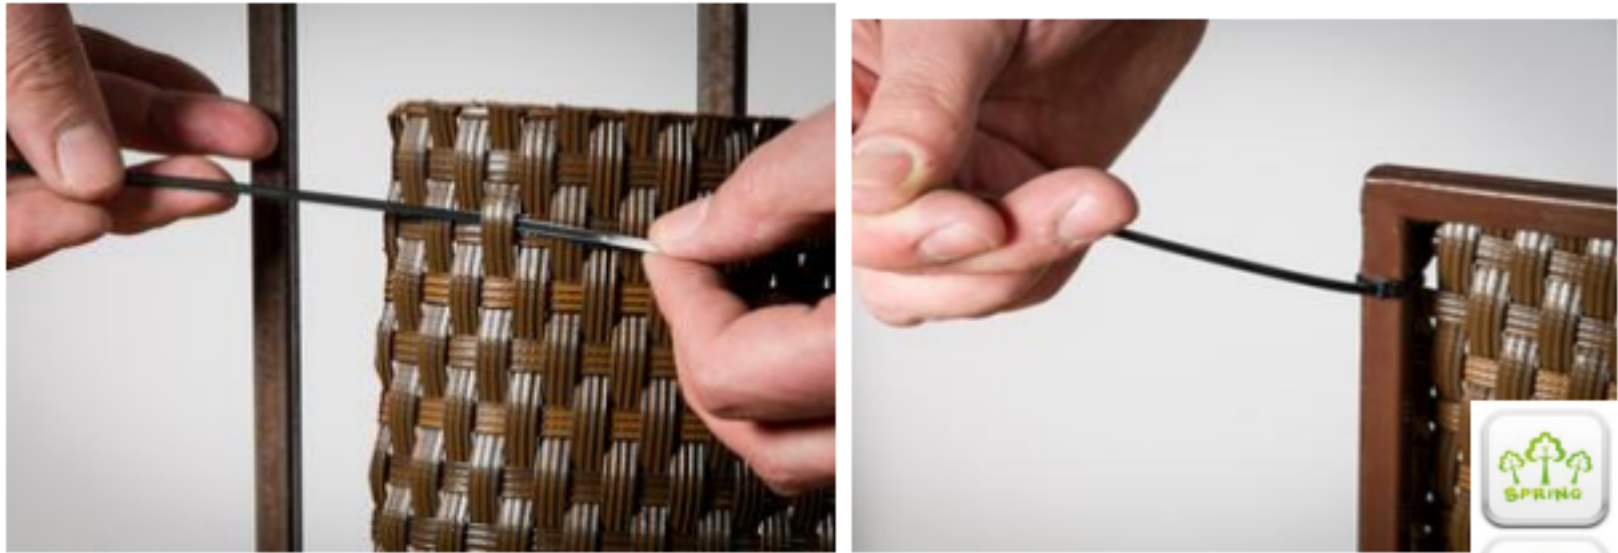

Upholstery staples: In case of wood or OSB board to attach, you can simply use a staple gun.



Screws: Other way of attaching is by using screws or nails. Montage will be more esthetic if you put the screw or nail under the polyrattan stripe, which will be later used as a cover for screw/nail head.

